

# Qware

Children's Mobile Game Station

 
## FILM & SEE

User Manual

QW MGS-150



Please read these instructions before using the product and save them for future reference.  
The illustrations are for reference only and are subject to change without notice.

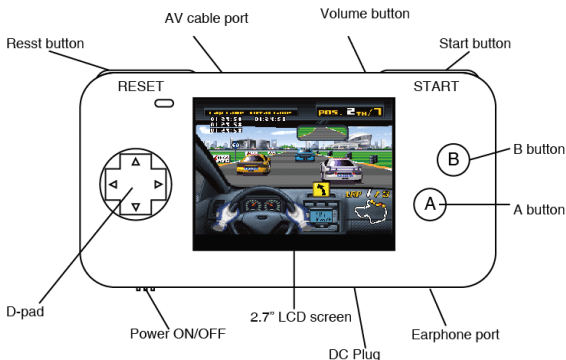

## PRODUCT FEATURES:

16-Bit Digital Micro-processor Platform

Built in 150 games

2.7" LCD TFT Screen

Portable game console

AV output to connect the game console to TV (cable not included)

Input for AC power adaptor (power adaptor not included)

Supports battery operations (batteries not included)

## CONTAINS:

Handheld Game Console

Instruction Manual

## BUTTON SUMMARY:

Below a description list of all buttons on the pocket game console. Detailed game information will be advised further in this instruction manual.

 
D-Pad	Direction key
Reset button	Restart into main Menu.
A Button	Confirm key
B Button	Special functional key
Start Button	Pause function (select "Resume" or "Quit" from the game)
Select button	<b>Confirm Key</b>
AV Cable Port	Connect with TV (through optional available AV cable)
Earphone Port	Connect with the earphone (earphones optional)
Volume Button	Adjust the volume

## BATTERY INSTALLATION

Please remove the screw of the battery door cover at the back of the game console. Open the battery door and insert 3 pieces "AAA" batteries (not included) into the unit. Please take care to put the batteries in right way by using + and - on battery and main unit.

## IMPORTANT : BATTERY INFORMATION

Please retain this information for future reference .Batteries should be installed by an adult person.

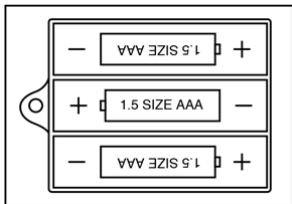

#### **CAUTION:**

Always follow the instructions very carefully. Use only new batteries according specifications and be sure to insert them correctly by matching the + and – polarity markings.

Never use rechargeable batteries with un-rechargeable batteries .

Do not mix old batteries and new batteries.

Remove exhausted or dead batteries from the console.

Remove batteries if the console has not been used for a long time.

Do not make short circuit on the supply terminals.

Should the game console get any problems caused by local electrical interference, please move it away from other electrical equipment. In case the problem still not solved, please remove and install batteries again to reset the unit.

Please keep the game console away from small children below 5 years old.

 
Do not dispose of put batteries in open fire, batteries may explode or leaking fluid which harms health and environment.

#### **CONNECTION TO TELEVISION:**

The game console can be connected to TV by using a special AV cable. The AV cable is not included and can be purchased at additional cost at your dealer. In case you will buy this AV cable please find below the instruction and drawing to connect the console to TV.

Put the small connector in the game console and connect the red and yellow connector to the TV/DVD player. Please consult the instruction manual from TV/DVD player, which input is needed on the TV/DVD player.

Furthermore, please put the connectors of the cable fully into the sockets. In case there is no external AV input on the TV available, please connect the AV cable to your DVD player and refer to the instruction manual from the TV/DVD player for further installation instruction.

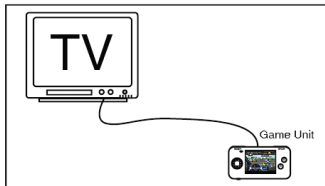

#### **MAINTENANCE AND USE OF THE CONSOLE:**

Handle the game console with care and store in a clean and dust free area. Keep the game console away from moisture, extreme temperatures or any environment which can harm the game console.

Do not disassemble the game console yourselves and return to your dealer in case there is any problem caused.

#### **LIST OF GAMES:**

Tennis



Arrow Keys: Move Left and Right

A : Confirm / Hit the ball

START : Pause / Quit

Baseball



Arrow keys: Select baseball bat

A: Confirm selection

A: Hit the ball

START : Pause / Quit

Golf



Arrow keys: Select Golf club

Arrow keys or B: Overview of the distance

A: Hold to adjust power level. Release to hit the ball.

START: Pause / Quit

Table  
Tennis



Arrow Keys : Move Left and Right

A : Confirm / Hit the ball

START : Pause / Quit

Basketball



Arrow Keys: Move Left and Right

A : Press for one second. Release to throw the ball.

START : Pause / Quit

Bowling



Arrow Keys: Move Left and Right

A : Adjust throw angle

A : Hold to adjust power level. Release to throw the ball.

START : Pause / Quit



## Darts



A : Confirm throwing placement  
 A : Confirm throwing position  
 A : Press to confirm power level. Release to throw dart.  
 START : Pause / Quit

## Boxing



Left+A: Left attack  
 Left+B: Left defense  
 Right+A: Right attack  
 Right+B: Right defense  
 START: Pause / Quit

## Run



 
A: Press repeatedly to run  
 B: Hurdle  
 START: Pause / Quit

## Fencing



Left: Move backward. Double click for fast movement.  
 Right: Move forward. Double click for fast movement.  
 A: Attack  
 B: Sword wielding  
 START: Pause / Quit

## Swim



A: Press repeatedly to swim  
 B: Breathe  
 START: Pause / Quit

## Racing



Arrow Keys: Move Left and Right  
 A : Accelerator  
 START : Pause / Quite

Trampoline



UP: jump  
Up + Right: swivel  
A : Confirm  
B : Confirm

Shudu



A: Select difficulty  
A: Select "Open hints" or not  
A: Select grid  
- Number 1 to 9 are on the left of the screen.  
Arrow Key+A: Select number  
B: Uncheck the grid  
START: Pause / Quit

Move Box



Move all boxes to where the money bags are.  
Arrow keys+A: Select level  
Arrow keys: Adjust directions  
START: Pause / Quit

100 Floor



Arrow Keys: Move Left and Right  
START : Pause / Quit

Benthal  
Jewel



Match 3 blocks with the same color vertically, horizontally or diagonally.  
Arrow keys: Move left, right, down  
A: Change color block positions  
START: Pause / Quit

Super  
Memory



 
Pair the same cards.  
Arrow keys: Adjust directions  
A: Confirm the card  
START: Pause / Quit

Linking Pet




Pair the pets.  
Arrow keys: Adjust directions  
A: Select picture  
START: Pause / Quit

Sub Warfare



Arrow Keys: Move Left and Right  
A : Throw bomb in the front  
B: Throw bomb at the back  
START : Pause / Quit

 Color Stone



Combine all stones together / Combine stones in same color together.  
Arrow keys: Adjust directions  
B: Return to the previous step  
A: Restart  
START: Pause / Quit

Black Jack



Arrow keys+A: Select bet \$1 / \$5 / \$25 / \$100 / \$500  
B: Dealing  
Arrow keys: Select option split / stand / hit / double  
A: Confirm option  
START: Pause / Quit

Rally




A: Accelerator  
B: Break  
Arrow keys: Turn left and right  
START: Pause / Quit

Pair Match



Match 3 blocks with same graphic together.  
Arrow keys: Adjust directions  
A: Confirm selection/ B: Undo selection  
Arrow keys: Swap the selected block to the position for matching  
START: Pause / Quit

## Freecell

 

Put all cards in descending order and alternate color (red & black) in the 4 blocks on the right hand side.  
Arrow keys: Move the finger on the card you would like to remove.

A: Confirm the card

Arrow keys: Move the confirmed card to the position you desire.

START: Pause / Quit

## Mine



Arrow keys: Select new game or view records / Select difficulty / Adjust directions

A: Confirm selection

B: Return to the previous step.

START: Pause / Quit

## Up Stairs



A: Hold to adjust power level. Release to jump.

A: Jump and hold the balloon.

Press A again to jump off from the balloon before it bursts

START: Pause / Quit

## GT Racing



A: Accelerator

B: Break

Arrow keys: Turn left and right

START: Pause / Quit

 
## Jumping Mary



Arrow keys: Jump

START: Pause / Quit

## Gobang



Put 5 dots together to win the game.

Arrow keys: Adjust directions

A: Confirm selection

START: Pause / Quit

### Find Fault



Circle 5 difference.  
 Arrow keys: Move to the spot with difference  
 A: Confirm  
 START: Pause / Quit

### Gather Eggs



Arrow keys: Move left and right  
 START: Pause / Quit

### Brick Blaster



Arrow keys: Move left and right  
 A: Release the pin  
 START: Pause / Quit

### Elvish Boy



Arrow keys: Move back and forth  
 A: Jump  
 START: Pause / Quit

### Escape the Trap



 
Arrow keys: Move left and right  
 START: Pause / Quit

### Castle Smasher



Arrow keys: Adjust the bomb direction  
 A: Hold to adjust power level. Release to fire.  
 START: Pause / Quit

Transmover



Arrow keys: Move left and right  
A: Confirm / shooting  
B: Replay  
START: Pause / Quit

Jumping  
Boy



Collect all coins, gems and gifts.  
A: Jump  
START: Pause / Quit

Puzzle  
Connection



Arrow keys: Move to different directions  
A: Confirm  
START: Pause / Quit

Balloon  
Boy



Arrow keys: Move left and right  
A: Hold to fly. Release to fall.  
START: Pause / Quit

Build Road



Arrow keys: Move left, right and down  
B: Change shape  
START: Pause / Quit

Rescue  
Pets



Arrow keys: Move left and right  
START: Pause / Quit

Motoboat



A: Accelerator  
B: Break  
Arrow keys: Turn left and right  
START: Pause / Quit

Crazy  
Fighter



Arrow keys: Adjust directions  
A: Fire  
B: Bomb  
START: Pause / Quit

Homeward  
Journey



Operation:

Bubble  
Destroyer



UP:jump

Hare  
Fighter



Up+Right: swivel

Balloon  
Shooting



A : Confirm

Maze  
Combina-  
tion



B : Confirm

PRECIPICE



Direction keys : Move A: confirm

Monkeys



Direction keys : Move A: Shooting

Beer  
Master



Direction keys Up/down : Move  
A : food  
MENU : Pause or exit

Follow Me



Direction keys : Move

OnFire



Direction keys : Move



Jack  
Adventure



Left/Right: Move  
UP: Jump  
Down :Down  
A: Shooting

Spring  
Mice



Direction keys : Control the direction  
A : Jump

Rope  
Skipping



A : Jump

Japanese  
Sumo



Left/Right: Move  
A: Attack  
B: Wrestling

Tanks PK  
War



Left/Right: Move    A: Fire

Cake Party



 
A: Confirm option  
Arrow keys: Choose lane  
A: Release cake  
START: Pause / Quit

Cartoon  
Puzzle



Arrow keys+A: Select puzzles and swap  
START: Pause / Quit

Gold Miner



A: Confirm direction  
START: Pause / Quit

Good  
Fisherman



Arrow keys: Move back and forth  
A: Release fly line  
START: Pause / Quit

Jumping  
Eggs



A: Jump  
START: Pause / Quit

Motocross



A: Jump  
START: Pause / Quit

Open Gold  
Box



Arrow keys+A: Select player  
Arrow keys+A: Select box  
START: Pause / Quit

Seize  
Jewelry



A: Jump  
Arrow keys: Move back and forth  
START: Pause / Quit

Super Brick



Arrow keys: Move left and right  
A: Select brick  
Arrow keys+A: Move selected brick left and right  
START: Pause / Quit

X Training



Arrow keys: Adjust directions  
START: Pause / Quit

Super  
Porter



Put boxes in one line.  
Arrow keys+A: Lift up the box on the right  
Arrow keys+A: Lift up the box on the left  
B: Jump  
START: Pause / Quit

Gas Station



Arrow keys: Adjust directions  
A: Hold and drag car or food to another position  
START: Pause / Quit

Cup  
changing



Arrow keys: Adjust directions  
A: Confirm cup  
START: Pause / Quit

RobotWar



Direction Keys : Move Tank  
A : Shooting

30 Degree



Left : Acceleration  
Right : Deceleration  
A : Little Jump  
B : Big Jump

Diamond  
Forest



Left/Right : Move  
A : Suction  
B:Throw

WestCow-  
boy



Left/Right : Move  
A : Shooting

PaoPao



Left : Deceleration  
Right : Acceleration  
A : Jump

Bumper  
balls



Direction keys : Move  
A : Ready A release:bating

Happy  
Night



A : Fly/Drop

SeaFlight



Direction keys : choose direction  
A:Confirm  
B:shooting

Big Shot  
Checker



Direction keys:choose position  
A: confirm  
B:Cancel

HighWay  
Racing



Arrow keys+A: Select car  
Arrow keys: Adjust directions  
A: Accelerator  
START: Pause / Quit

Track  
Racing



Arrow keys+A: Select car  
Arrow keys: Adjust directions  
A: Accelerator  
START: Pause / Quit

Pocket  
Change



Direction keys : Move  
A : confirm  
B : clean coins

Slot  
Machine



Arrow keys+A: Select bat  
-Go to SPIN and press A.  
-Choose bet again then go to SPIN and press A to start a new game.  
START: Pause / Quit

Brain  
Challenge



Direction keys : Move  
A : confirm

Mini Soccer



Up/Down : Move

Frogger



Up/Down : Move

Table  
Football



Direction keys : choose/move  
A : confirm  
B : return

Archery



Direction keys: Move A:shoot

Zuma



 
Direction keys : Move  
A:confirm

Climbing  
Expert



Direction keys : Move  
MENU : Pause or exit

Shape  
Switcher



Direction keys : Move  
A : Replay  
MENU : Pause or exit

CrazyPush



Direction keys : Move  
A : Use the tools  
MENU : Pause or exit

Super  
Pizza



Place the ingredients on the empty pizza at the same setting as shown.  
Arrow keys: Adjust directions  
A: Pick one ingredient  
Arrow keys: Move to the appropriate position  
A: Confirm position  
START: Pause / Quit

Panda  
Labyrinth



Move boxes to the pink grid to open the doors.  
Arrow keys: Adjust directions  
START: Pause / Quit

## Beach Volleyball



Arrow keys+A: Select player  
Arrow keys: Adjust directions  
A: Hit the ball  
START: Pause / Quit

## Cake Store



Direction keys : Move  
A : Confirm  
MENU : Pause or exit

## Dodgeball



Arrow keys: Adjust directions  
A: Throw the ball  
START: Pause / Quit

## Greedy Girl



Arrow keys: Adjust directions  
START: Pause / Quit

## Forest Adventure



Arrow keys: Move back and forth.  
A: Jump  
B: Shoot  
START: Pause / Quit

 


Ice Hockey



Arrow keys: Select  
A button:hit ball

Curling

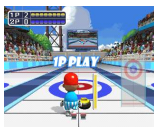

Arrow keys: Select  
A button : confirm  
B button:action

Parking Lot



Direction keys : Move A:confirm

Dogs



Direction keys : Move A:confirm

Minibee



Direction keys : Move A:Shooting

Rolling Box



Direction keys : Move

Cartoon Match



Direction keys : Move  
A:confirm

Crossing



Direction keys : Move  
A : Jump

Maze Of Doors



Direction keys : Move

Spin Match



Direction keys : Move  
A:Turn the little ball  
B:Replay

Herculean Guy



Direction keys : Move  
A:Push stone

Magnet Boy



Direction keys : Move  
A:Jump

Super Porter



Left/Right : Move  
A : Lift box  
B: Jump  
MENU : Pause or exit

Chess



Direction keys : Move  
A : Confirm  
B : Back

Eat Bean



Direction keys : Move

Link Water Pipe



Direction keys : Move  
A:Confirm  
B:Replay

Classic Tangram



Direction keys : Move  
A:Confirm  
B:Rotate

Brain Age Test



Direction keys : Move selection  
A: Confirm  
B:Replay

Block Construction



Direction keys : Move

A : Confirm

Fruit Family



Direction keys : Move

A : Confirm

B : Use the tool

Flag Match



Direction keys : Move

A : Use the tool

Pool Party



Left/Right : Move

A : Jump

Wonderful Pompon



Direction keys : Move

A : Bomb

Fishing



Direction Keys: Move Selection

A : Confirm/Throw Line/Take-up

B : Return/Fast Take-up

Pirate Landing



Direction keys : Move  
UP/DOWN: Adjust angle  
A: confirm

Palace Guardian



Direction keys : Move

Nimble Stone



Direction keys : Move  
A: Replay

Star War



Direction keys : Move  
A: Attack  
B: Defense

Bombman



Direction keys : Move  
A : Set bomb

Save The Fallen



Direction keys : Move  
A : Jump  
B : Shoot

Hell Marksman



Direction keys : Move  
A key:shoot

Cafeteria



Direction keys : Move  
A : Confirm

IQ Cow



Direction keys : Move  
A : Confirm  
B : START RUN

Silversphere



Direction keys : Move

Anti Gravity Robo



 
Direction keys : Move  
A : Jump  
B: Swith direction

Piggy Golf



Left/Right: Adjust angle  
A : Confirm

Heroboy



Left/Right: Move  
A : Continue jump

Bomb Chain Unlimited



Direction keys : Move  
A key : Set Bomb

Suicide Squad



Direction keys : Move  
A : Set the direction of the arrow

Overmaze



Direction keys : Move

Seven



Direction keys : Move  
A key : fall

Four Boxes



Direction keys : Move

Airborne Alien



Direction keys : Move

Gliding Apple Girl



Right Direction key : speed up

Down direction key: fall

Throw The Coins



Direction keys : Move

A:confirm

Horse Racing



Direction keys : Move

A:speed up

Puzzle Ball



Direction keys : Move

A:confirm

Jumping Ball



Direction keys : Move

 


Mad Ball



Direction keys : Move

Crazy Tank



Direction keys : Move

A key:shoot